



**Installing Meeting Schedule with Acrylic Panel on Standoffs
(Front Assembly)
into BRICK or STONE**

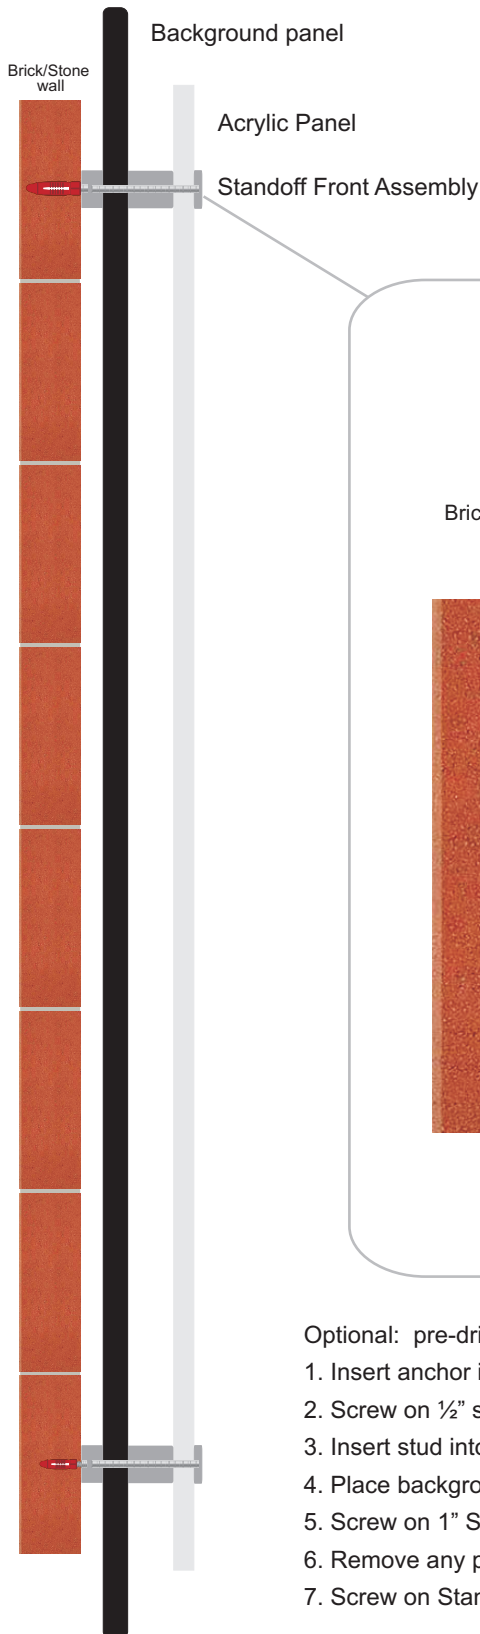

Standoff Front Assembly

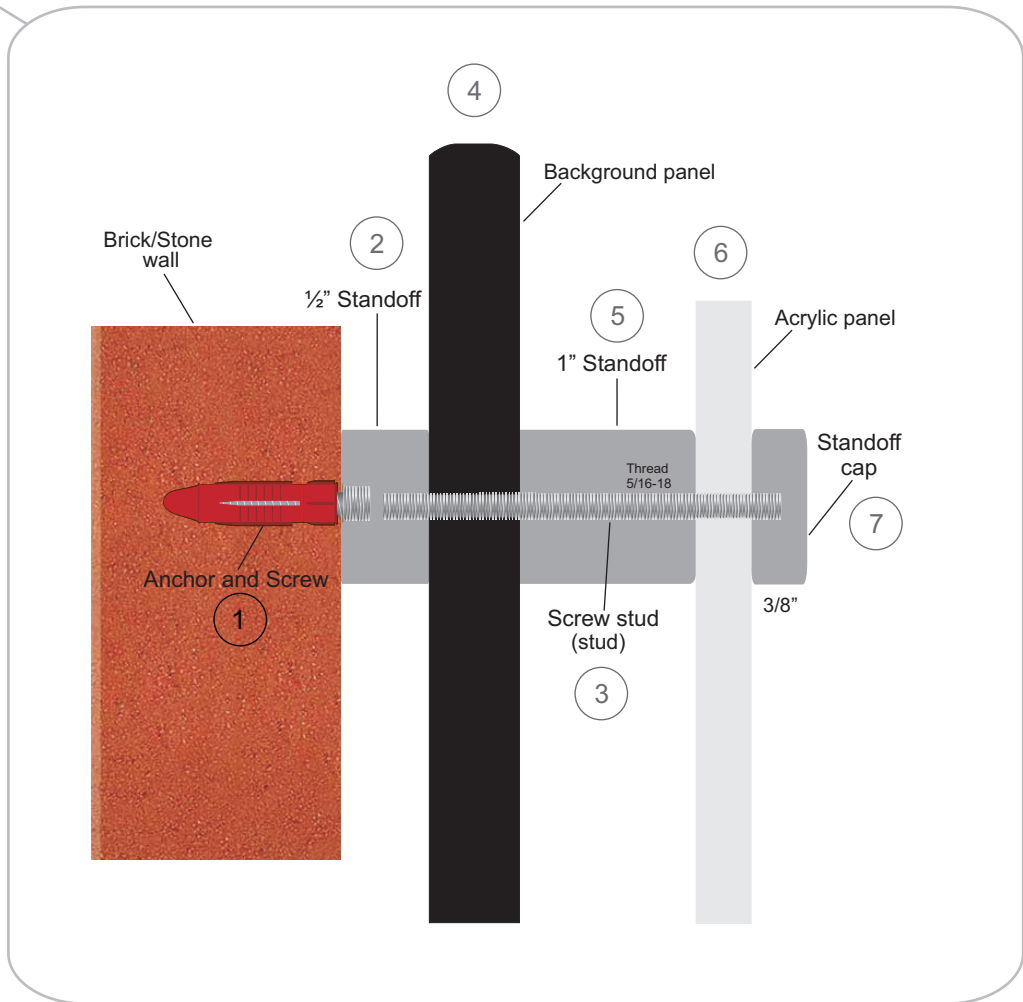

Optional: pre-drill a starter hole into brick/stone (Use washers provided as necessary)

1. Insert anchor into brick/stone. Insert anchor screw into anchor securely - do not over-tighten.
2. Screw on 1/2" standoff - tighten snugly - do not over-tighten
3. Insert stud into 1/2" standoff - tighten snugly - do not over-tighten
4. Place background panel on stud
5. Screw on 1" Standoff in front of background panel (level panel before tightening completely)
6. Remove any protective paper from back of Acrylic panel. Place Acrylic panel on 1" standoff and stud
7. Screw on Standoff cap on remainder of stud (level panel - as necessary - before tightening completely)

KHSignage.com © 2013 Bella Teres LLC. These presented sketches, drawings and instructions are the property of Bella Teres LLC. They are intended for use by our clients in the installation of this Corporation's products. Any modification or reproduction without the written consent of our Corporate President is strictly forbidden.



KHSignage.com

(770) 881-7689 Phone
(770) 881-8249 Fax
info@KHSignage.com
www.KHSignage.com

Correspondence to:
1415 Highway 85 North
Suite 310-129
Fayetteville, GA 30214

These instructions may be downloaded from the KHSignage.com website:

www.KHSignage.com/installations.html